

Digital Proprietary Telephone

Quick Reference Guide

Model No. KX-T7667

Important Information

When using the KX-T7667, keep the following conditions in mind.

- If there is any problem, unplug the extension line and connect a known working phone. If the known working phone operates properly, have the defective phone repaired by a specified Panasonic Factory Service Centre. If the known working phone does not operate properly, check the KX-TDA series Business Telephone Systems and the internal extension wiring.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the unit.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C) and vibration, and should not be exposed to direct sunlight.
- Do not use benzine, thinner, or the like, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Do not use any handset other than a Panasonic handset.
- Do not disassemble this product. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- When a failure occurs which exposes any internal parts, disconnect the telephone line cord immediately and return this unit to service centre.
- Never attempt to insert wires, pins, etc, into the vents or other holes of this unit.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

THE HANDSET EARPIECE IS MAGNETISED AND MAY RETAIN SMALL FERROUS OBJECTS.

DISCONNECT THE TELEPHONE LINE CORD FROM THIS PRODUCT IF THIS PRODUCT EMITS SMOKE, AN ABNORMAL SMELL OR MAKES UNUSUAL NOISE. THESE CONDITIONS CAN CAUSE FIRE OR ELECTRIC SHOCK. CONFIRM THAT SMOKE HAS STOPPED AND CONTACT AN AUTHORISED SERVICE CENTRE.

IMPORTANT NOTICE:

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in an emergency.

Note: • In this manual, the suffix of each model number is omitted.

• This Class B digital apparatus complies with Canadian ICES-003.

Important Safety Instructions

When using this unit, basic safety precautions, including those below, should always be followed to reduce the risk of fire, electric shock and injury to persons.

- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on this unit.
- 3. Unplug this unit from the main unit before cleaning. Do not use liquid or aerosol cleaners. Clean with a damp cloth.
- 4. Do not use the unit near water, for example, near a bathtub, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- 5. Place this unit on a flat surface. Serious damage and/or injury may result if the unit falls.
- 6. The unit should never be placed near or over a radiator or other heat source.
- 7. Do not allow anything to rest on the extension cord. Do not locate this unit where the cord may be stepped on or tripped on.
- To reduce the risk of fire or electric shock, do not overload wall outlets and extension cords.
- 9. Do not insert objects of any kind into this unit through openings, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the unit.
- 10. To reduce the risk of electric shock, do not disassemble this unit. Only qualified personnel should service this unit. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock.

- Unplug this unit from the main unit and have the unit serviced by qualified service personnel in the following cases:
 - A. When the extension cord is damaged or frayed.
 - B. If liquid has been spilled on the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the manual. Adjust only controls covered by the manual. Improper adjustment may require repair by an authorized service centre.
 - E. If the unit has been dropped, or damaged.
 - F. If the unit's performance deteriorates.
- 12. Avoid using a telephone (other than a cordless type) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone in the vicinity of a gas leak to report the leak.

SAVE THESE INSTRUCTIONS

Feature	Operation		
	Making Calls		
Calling	To an extension To an outside party \swarrow \blacktriangleright extension no. \blacktriangleright $f_{(l)} \stackrel{(l)}{\leftarrow}$ \blacktriangleright \Box \frown \Box \frown \Box \bullet \Box \Box \bullet \Box \Box \bullet \Box \Box \bullet \bullet \bullet \Box \bullet \bullet \bullet \bullet \Box \bullet		
Redial			
Quick Dialling	A puick dial no. ► G _{(n}		
One-touch Dialling	To store PROGRAM O \blacktriangleright O \bullet		
	assigned as a One-touch ⇒ ► □ Dialling button ► G(κ)		
Operator Call			
Personal Speed Dialling	To store To store 4 3 0 4 4 10 10 10 10 10 10 10 10		
System Speed Dialling	To dial AUTO DAL STORE ► System speed dial no. (3 digits) ► G((2)		
Doorphone Call	★ $ \times 3 1 $ doorphone no. (2 digits) $\int_{C. Tone} \int_{C} \int_{C} f'_{C} $		
Automatic Callback Busy	To set While hearing a busy tone 6 C. Tone 6 C. Tone 7 To answer from an idle extension While hearing a callback ring To answer from an idle outside line While hearing a callback ring While hearing a callback ring Image: State of the stat		
During a Conversation			
Call Hold	To hold $\stackrel{HOLD}{\bigcirc} \stackrel{?}{\bigcirc} \stackrel{?}{\bigcirc} \stackrel{?}{\longleftarrow} \stackrel{To retrieve a call at the holding extension}{\swarrow} \stackrel{NTERCOM}{\bigcirc} \stackrel{/}{\bigcirc} \stackrel{(ICD Group)}{\bigcirc} \stackrel{(ICD Group)}{\bigcirc} \stackrel{(ICC)}{\bigcirc} \stackrel{(ICC)}{\frown} \stackrel{(ICD Group)}{\frown} \stackrel{(ICC)}{\frown} \stackrel{(ICC)}{\leftarrow} \stackrel{(ICC)}{\frown} \stackrel{(ICC)}{\leftarrow} $		

_ 3 _

Feature	Operation
	During a Conversation
Call Transfer	$ \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array} \\ \begin{array}{c} \end{array}\\ \end{array} \\ \end{array} \\ \begin{array}{c} \end{array}\\ \end{array} \\ \begin{array}{c} \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \begin{array}{c} \end{array} \\ \begin{array}{c} \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \end{array} \\ \begin{array}{c} \end{array} \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} $ } \\ \end{array} } \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} \\ \end{array} } \\ \end{array} } \\ \end{array} \\ \end{array} } \\ \end{array} \\ \end{array} } \\ T } \\ T T O an outside a outsida outside a outsid
	Useful Features
Off-hook Monitor	To set/cancel During a conversation using the handset
Call Park	To set TRANSFER ↓ 5 2 ►
	To retrieve ★ 5 2 ► stored parking zone no. (2 digits) C. Tone G(* 2
Multiple Party Conversation	To add other parties during a conversation
Call Pickup	$ \begin{array}{c} & & & \\ \hline \\$
Sending a Call Waiting Tone	While hearing a busy tone $1 \rightarrow Wait$ for an answer. $\blacktriangleright \int_{0}^{1} $
Answering a Call Waiting	To hold the current call then talk to the new party $\stackrel{HOLD}{\longrightarrow} \models \bigoplus_{(CO)} / \bigoplus_{(CO)}^{INTERCOM} \models \bigcup_{(I') \in \mathcal{I}}$

* Disregard this step if both parties are extensions.

Feature	Operation
	Useful Features
Paging	To page ★ 3 3 ► paging group no. (2 digits) C. Tone Announce. Wait for Announce. Wait for an answer. C. Tone f(*)
	To answer ► ★ 4 3 C. Tone G((2)
	To allow/deny a paged announcement $ \begin{array}{c} $
Message Waiting	Caller To leave a message waiting indication When the called extension is busy or does not answer
	Called To call back extension ► C
Log-in/Log-out	F 7 3 6 1 For Log-in K 7 3 6 0 For Log-out K 7 3 6 0 For Log-out K All C. Tone
	Before Leaving Your Desk
Setting Absent Message	To set $ \begin{array}{c} & & \\ & $
	To cancel
Call Forwarding	 ▶ ★ 7 1 ▶ Both Calls 1 Outside Calls 2 Intercom Calls 2 All calls
	 All calls Busy No answer Busy/ No answer CO line access no. outside phone no. C. Tone


Feature	Operation
	Before Leaving Your Desk
Extension Dial Lock	To lock To unlock To unlock * $*$ 7 7 0 $*$ $(max. 10 digits)*$ $C. Tone*$ $C. Tone$ $*$ $C. Tone*$ $C. Tone*$ $C. Tone*$ C
	Setting the Telephone According to Your Needs
Do Not Disturb	 ★ 7 1 ► Both Calls Outside Calls Intercom Calls C. Tone
Extension Feature Clear	★ 7 9 0 C. Tone
Timed Reminder	To set $12 H$ $(4 \text{ digits}) \rightarrow 0 \text{ AM}$ 1 PM $24 H$ 1 hour/minute 4 digits $12 H$ 1 hour/minute 4 digits
	To cancel To stop or answer the ring back \mathbb{E}
Receiving Call Waiting	To set/cancel for intercom calls
	 (0) No Call (1) Tone (2) Whisper OHCA C. Tone
	To set/cancel for outside calls

• For more details, refer to the Business Telephone System User Manual or consult your dealer.

- You can change the flexible CO buttons to the feature buttons.
- "Location of Controls" is shown on page 7.

Location of Controls

LCD (Liquid Crystal Display)

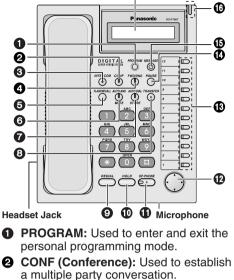


- **INTERCOM:** Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- FLASH/RECALL: Used to disconnect the current call and make another call without hanging up.

Setting


- **O** AUTO ANS (Auto Answer)/MUTE: Used to receive an incoming call in handsfree mode or mute the microphone/handset during a conversation.
- AUTO DIAL/STORE: Used for System/Personal Speed Dialling or storing programme changes.
- **3 TRANSFER:** Used to transfer a call to another party.
- **REDIAL:** Used to redial the last dialled number.
- **HOLD:** Used to place a call on hold.
- **SP-PHONE (Speakerphone):** Used for the hands-free operation.
- Navigator Key: Used to adjust the volume and select desired items for each function.
- Flexible Outside (CO) Line Buttons: Used to make or receive an outside call. Pressing this button seizes an idle outside line automatically. (Button assignment is required.) Also used as feature buttons. (Button assignment is required.)
- PAUSE: Used to insert a pause during dialling.
- MESSAGE: Used to leave a message waiting indication or call back the party who left the message waiting indication.
- Message/Ringer Lamp: When you receive a call, the lamp flashes red. When someone has left you a message, the lamp stays on red.


Speaker/Ringer/Handset/Headset Volume Speaker Volume While in hands-free conversation Ringer Volume While on-hook or receiving a call Handset/Headset Volume While using the handset or headset

LCD Contrast/Headset Mode

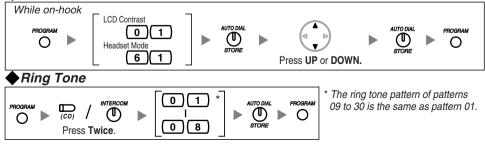


7—

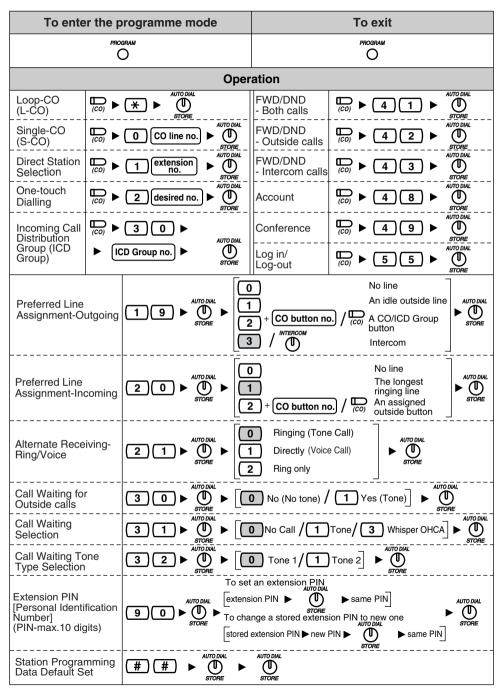


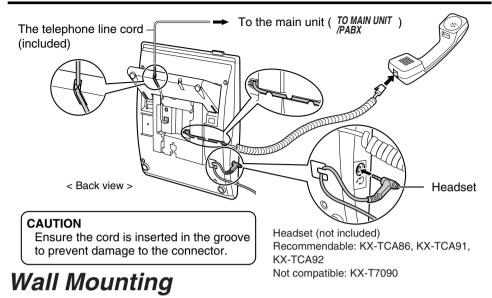


1 Pull down the handset hook until it locks, so the tab holds the handset.

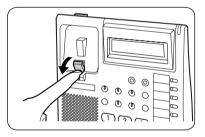


2 Remove the attached stand.

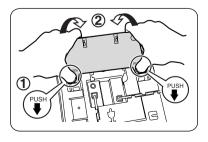

3 Mount the unit on the wall.

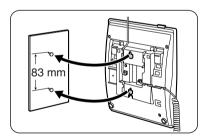

To temporarily place the handset down during a conversation, hook it over the top edge of the phone as shown.

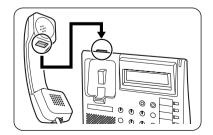

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.

PSQX3932ZA KK0306SY0